


Mat. - Nr. - Konstante  
 3740 . . . . .


Gebrauchsanweisung  
 59 1118  
 (RU)

- 1) Sticker Belende  
 42 4983  
 (RU)
- 2) 42 3941  
 V01,V02  
 60 0110  
 V03,V04
- 3) 17 1254  
 V01,V02,V03  
 60 32687  
 V04

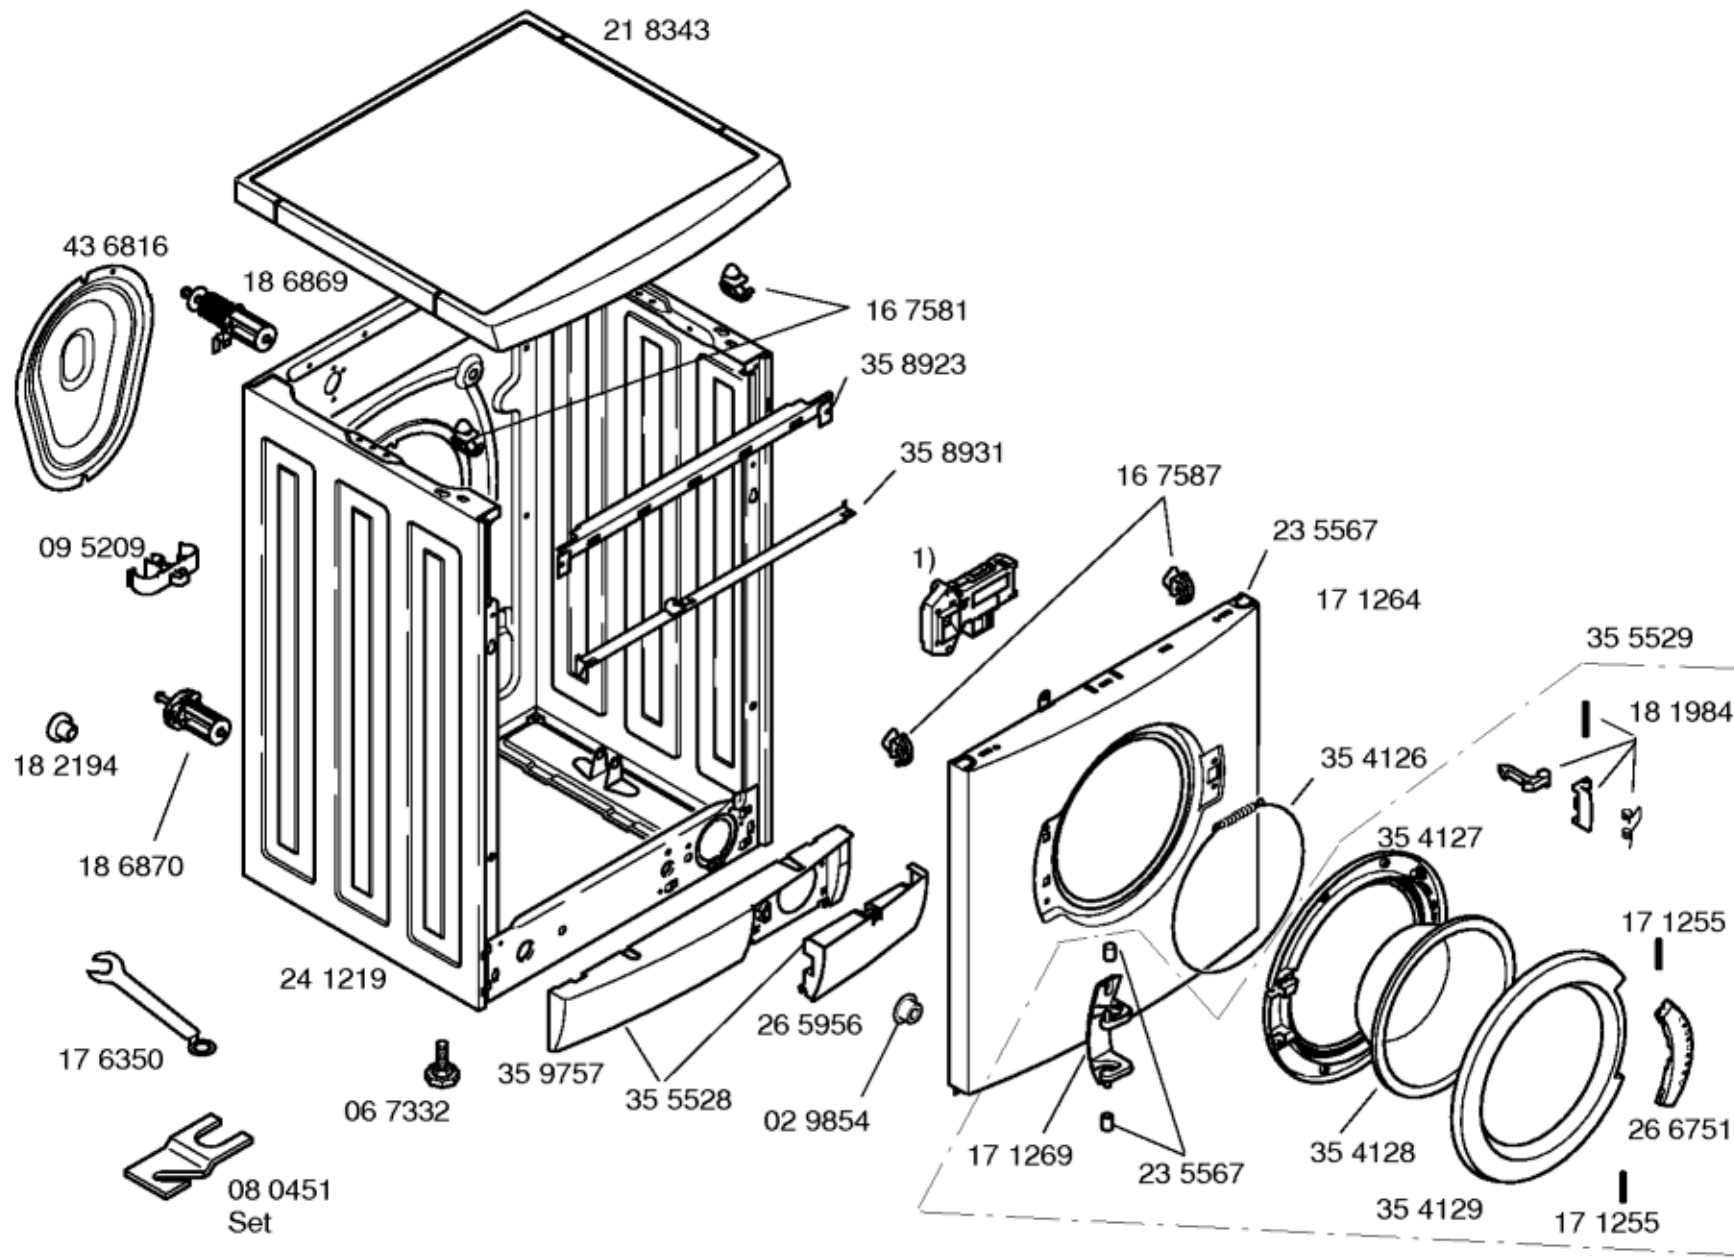


Mat. - Nr. - Konstante  
 3740 . . . . .

- 1) 18 2154
- V01
- 42 6992
- V02,V03,V04

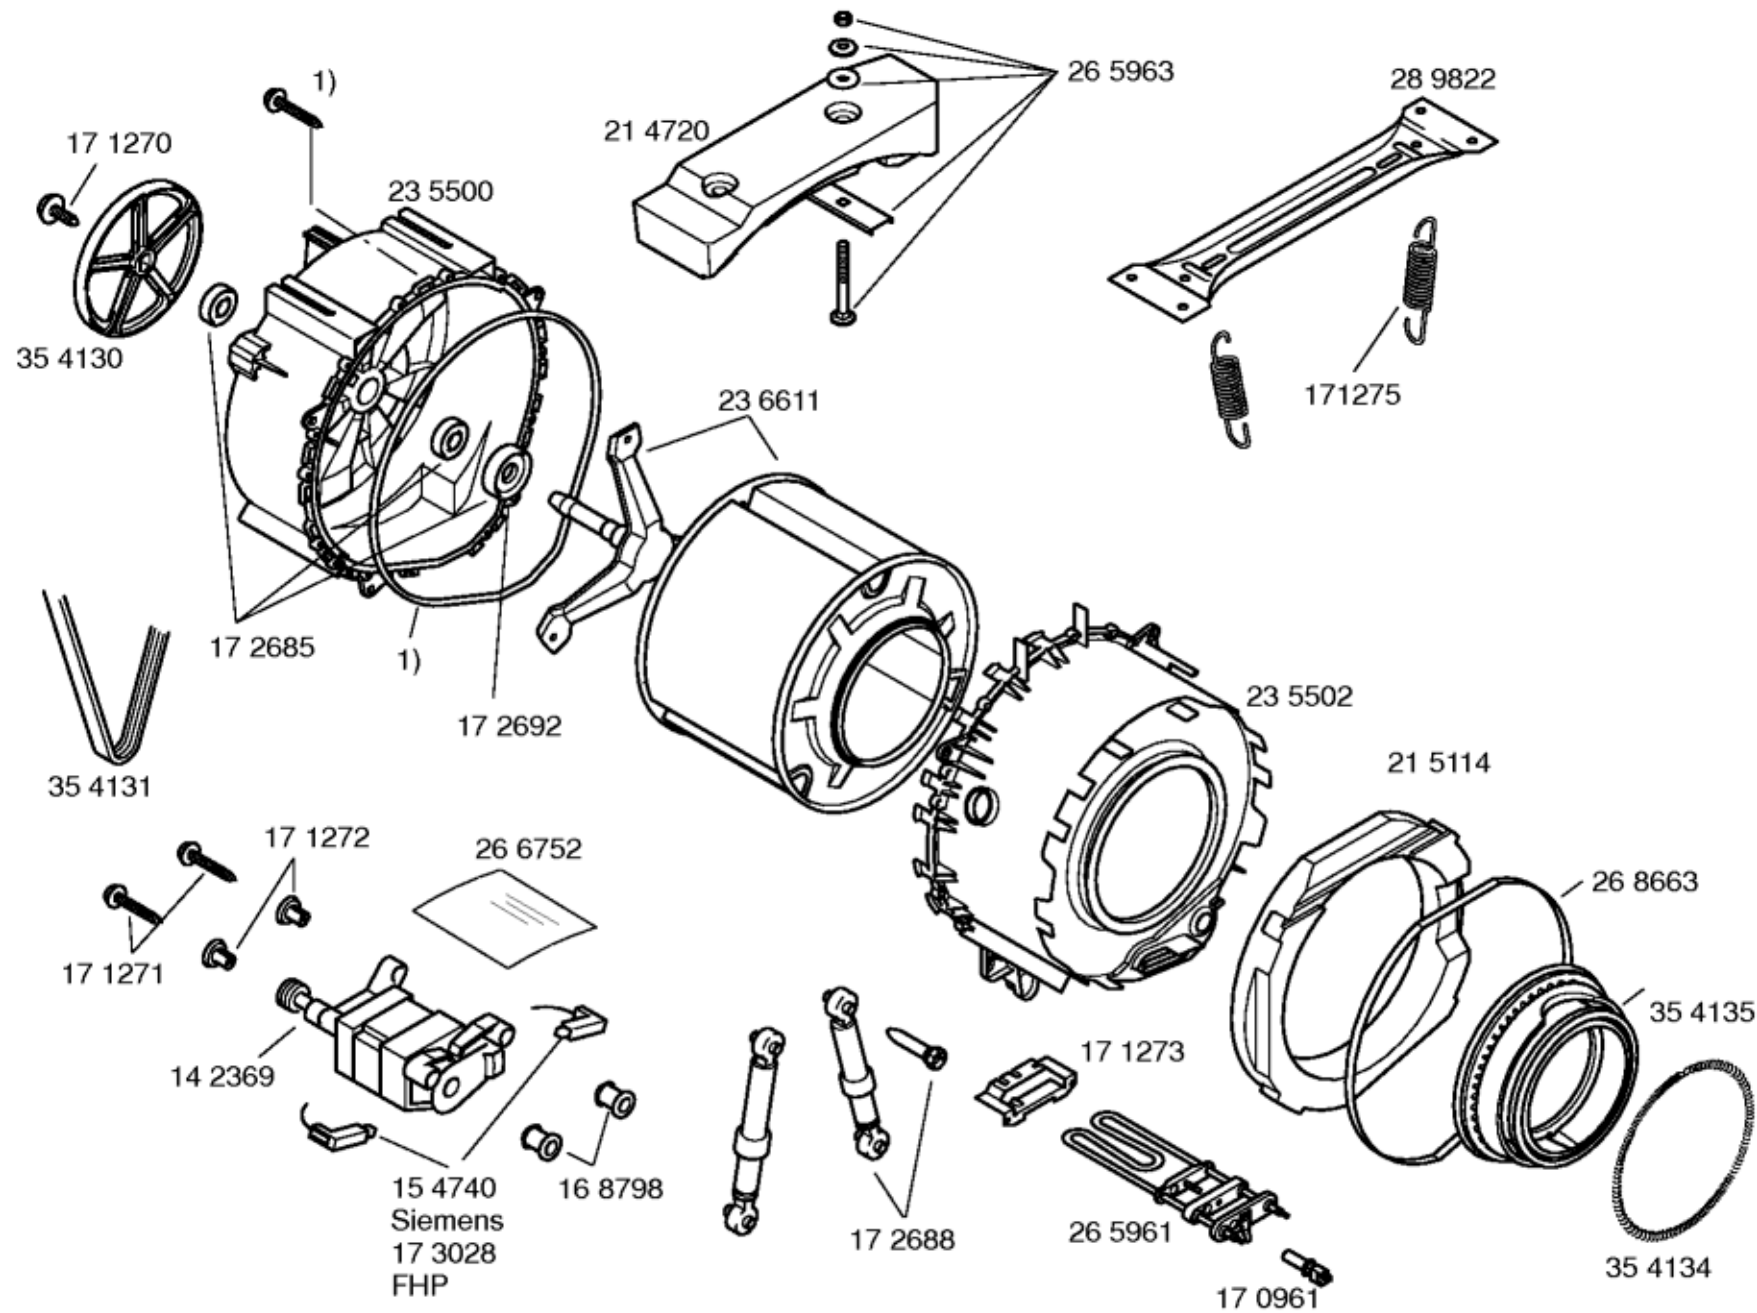

Mat. - Nr. - Konstante  
3740 . . . . .

1) 26 5964

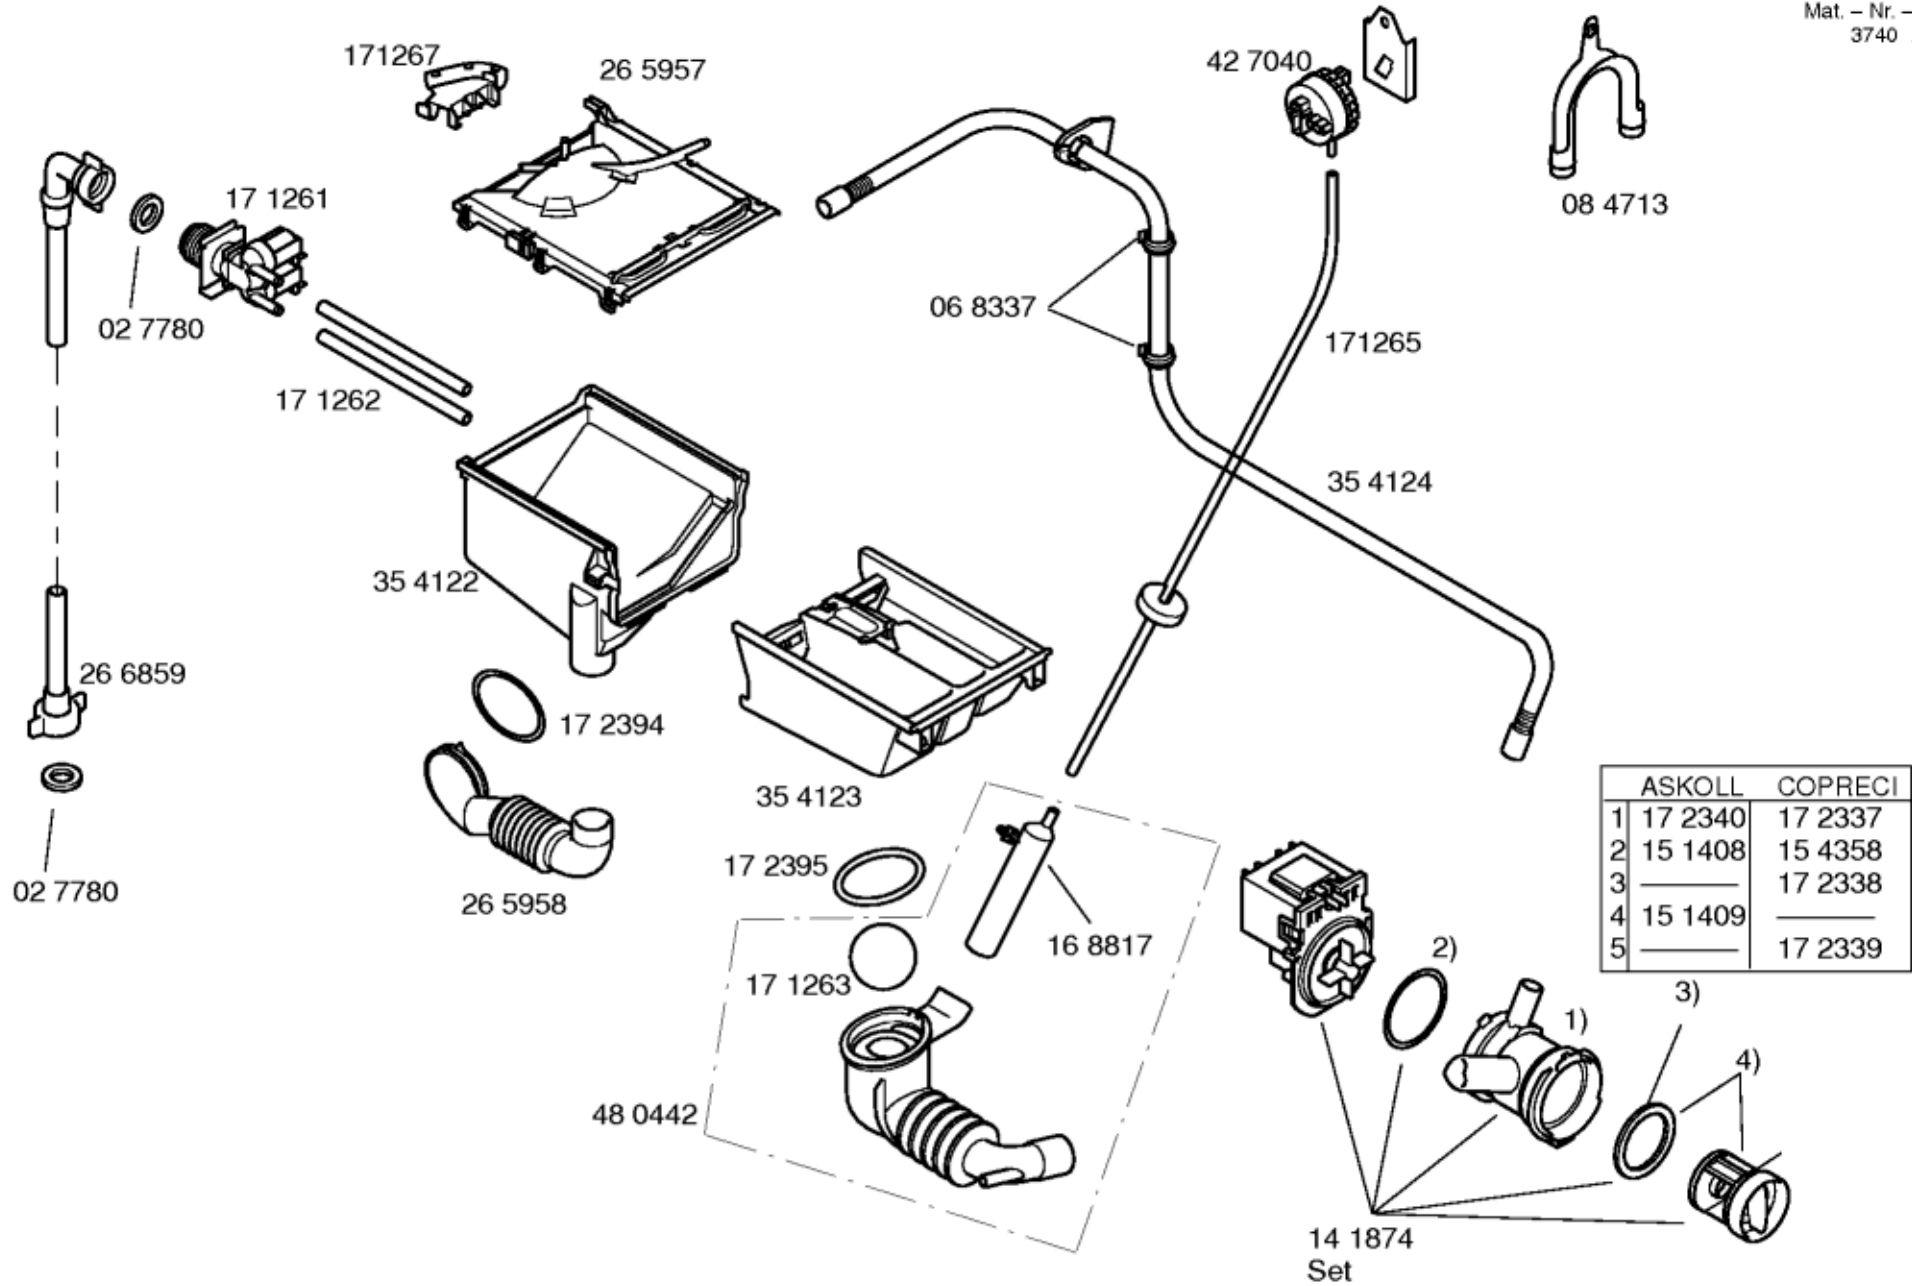

<b>Position ID</b>	<b>Spare part no.</b>	<b>Replacement</b>	<b>Description</b>
0001	00067332	00621463	Foot
0002	00084713	00655300	Holder
0003	00141874	00145787	Pump-drain
0004	00142369	00145563	Motor
0005	00163750		Ball bearing
0007	00167581		Holder
0008	00167587	00067083	Holder
0009	00170961		Sensor-NTC
0010	00171253	00481580	Power cord
0011	00171254	00623842	Capacitor-interference suppre.
0012	00171261	00428210	Valve-magnet
0013	00171270		Screw
0014	00171271		Screw
0015	00171272		Fixture
0016	00171273		Holder
0017	00171275	00606818	Spring-tank
0018	00171291	00613082	Shaft seal
0019	00172394	00421488	fastening ring
0020	00172395	00603523	fastening ring
0021	00172688	00448032	Shock absorber
0022	00172699		Knob-programme
0023	00172700		Knob-RPM
0024	00181184		Hose-vent
0025	00182154		Electric lock
0026	00182194		Lid
0027	00186869	00429205	Transit bolt
0028	00186870		Transit bolt

0030	00188918	00427040	Regulator-water level
0031	00214720		Weight
0032	00215114	00475501	Weight
0033	00236611	00215117	Drum
0034	00218343		Worktop
0035	00235502	00241627	Tub
0036	00235567		Front panel
0037	00235500		Tub at rear
0038	00241219	00711567	Housing
0039	00265958		Hose-fill
0040	00265961		Heating element
0041	00265964		Sealing
0042	00268663		Clamp
0043	00266748	00267678	Tray handle-dispenser
0044	00266752		Cover
0045	00266859	12013467	Hose-inlet
0047	00354126	00439671	fastening ring
0048	00354130	11002942	Pulley
0049	00354134		fastening ring
0050	00354135		Boot gasket
0053	00358304		Container return
0054	00358305		Hose
0055	00358306		Outlet hose
0056	00358923		Rail
0057	00358931	00435791	Rail
0058	00354131	00678914	Belt-drive
0060	00436816		Case-rear part
0063	00480442		Eco-hose-sump
0064	00591118		Instruction manual

0065	00355529		Window
0066	00354129	00366232	Frame-window
0067	00354127	00715042	Ring
0068	00354128	11020392	Window
0069	00266751		Handle
0070	00171255		Axis
0071	00171264		Bushing
0072	00171269		Hinge-window
0073	00171278	00634207	Latch
0074	00354123		Dispenser tray
0075	00354122		Dispenser tray-lower part
0076	00265957		Dispenser tray-upper part
0077	00423704		Cable harness
0078	00423938		Cable harness
0079	00423939		Cable harness
0080	00423940		Cable harness
0082	00423701		Cable harness
0083	00423702		Cable harness
0090	00172685		Bearing set